














Arizona
Chaise
Suspendue double




Double
Hanging chair
4335A/B/C

service@durahousewares.com

1-888-288-3872

22

A	B	C	D	E	F	G	H	I	J	K
										
1PC (+coussin & oreiller)	2PC	1PC	2PC	2PC	2PC	2PC	4PC	1PC	1PC	2PC

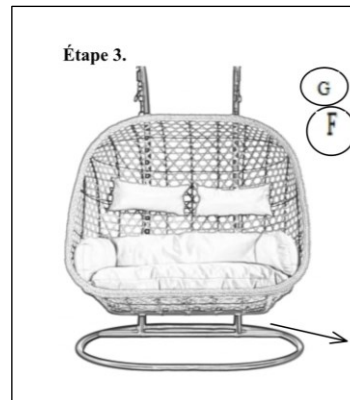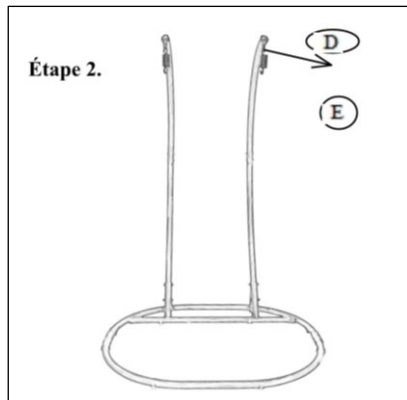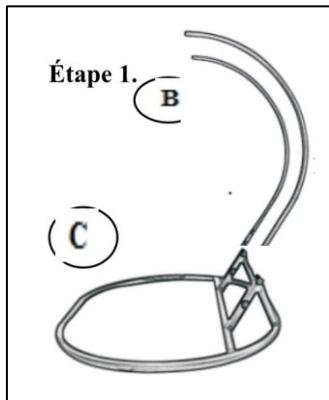

Sur une surface plane assemblez les pattes (pièces B 2 mcx) dans le haut de la structure C a l'aide de vis pièce H Serrez fermement les écrous et les boulons

Dans la structure assemblée, insérez la pièce D avec l'œil vers le bas dans le trou du poteau. Accrochez le ressort E a la pièce D

Accrochez le clip mousqueton G a la chaîne F sur la structure de la chaise ensuite suspendre la chaise au ressort.

Fixez le poteau et la chaise a l'aide de la pièce K

Information & avertissements

Poids maximal recommandé est 440 lbs

Ce produit est uniquement conçu pour accueillir 1 a 2 personnes à la fois. Ne dépassez pas cela car cela pourrait endommager le produit et causer des blessures.

Ne pas monter sur la structure

Vérifiez régulièrement toutes les vis ou boulons pour vous assurer qu'ils sont serrés.

Les précautions doivent être prises lors de l'assise des objets pointus peuvent provoquer des déchirures à la tissu ou endommager l'osier

Ce produit n'est pas un jouet et ne doit pas être utilisé comme balançoire en aucune circonstance car cela pourrait entraîner des blessures.












Conservez toutes les sources de flamme et de chaleur loin de ce produit en tout temps.




Lorsqu'il n'est pas utilisé rangez-le dans un endroit frais et sec loin de toute source de chaleur

Le fabricant est non responsable des dommages liés a la météo en raisons des vents fort ou de conditions météorologiques extrêmes.

Les enfants doivent être surveiller par un adulte lors l'utilisations de cette chaise

Ne jamais utiliser cette chaise sans les 2 ceintures de sécurité.

A	B	C	D	E	F	G	H	I	J	K
										
1PC (+coussin & oreiller)	2PC	1PC	2PC	2PC	2PC	2PC	4PC	1PC	1PC	2PC

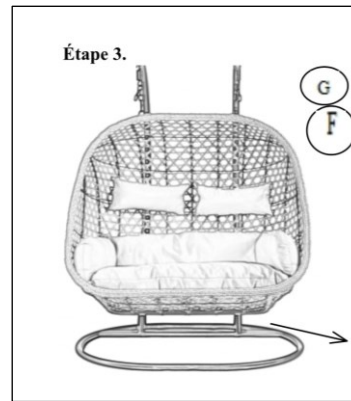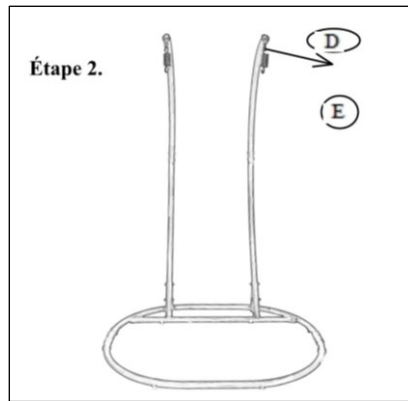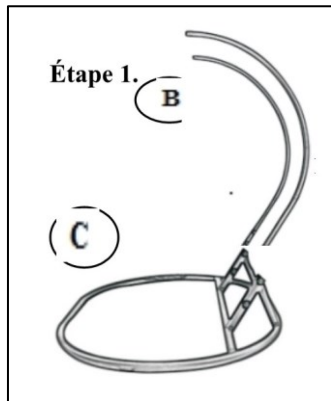

On a level surface assemble the legs (Parts B 2 pcs) in the top of the structure C using screws part H Tighten the nuts and bolts firmly

On the assembled frame, insert part D with the eye below into the frame pole. Hang spring E onto part D

Hang the chain G and Carabiner F on the chair frame. Then hang the chair on the spring.

Secure pole and chair using part K

Information & warnings

Max recommended weight is 440 lbs

This product is only designed to seat 1 or 2 persons at the time DO NOT exceed this as this could damage the product and cause injury.

This product should only be used on firm level ground.

Do not climb on the frame.

Check all screws or bolts on a regular basis to insure they are tight.

Care should be taken when sitting down sharp objects could cause tears to the fabric or damage the wicker swing.

This product is not a toy and should not be used as a swing under any circumstances as this could result in injury.

Keep all frame and heat sources well away from this product at all times.

When not in use please store away in a cool and dry place away from any heat source.

Manufacturer is not responsible for weather related damages due to high winds or extreme weather conditions.

Children must be supervised by adult when using the hanging chair

Never use this chair without the 2 security belt

The manufacturer is not responsible for weather related damage due to strong winds or extreme weather conditions.

Children must be supervised by an adult when using this chair

Never use this chair without the 2 seat belts