



Chicago

Chaise Suspendue / Hanging chair

4360A/B

4363A/B

4365A/B

4366A/B













4367A/B




4368A/B



service@durahousewares.com

1-888-288-3872

A	B	C	D	E	F	G	H	I	J	K	L
											
1pc +cushion & pillow)	1PC	1PC	4pc	1pc	1pc	1pc	1pc	2pc	2pc	4PC	1PC

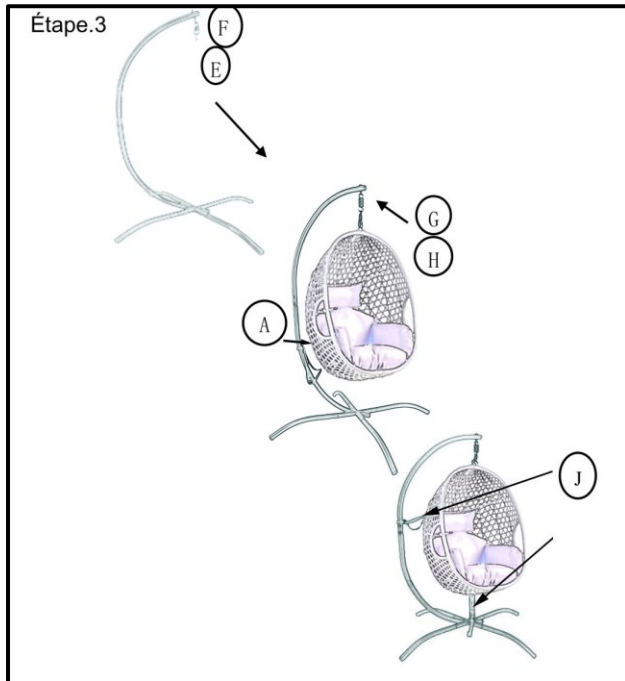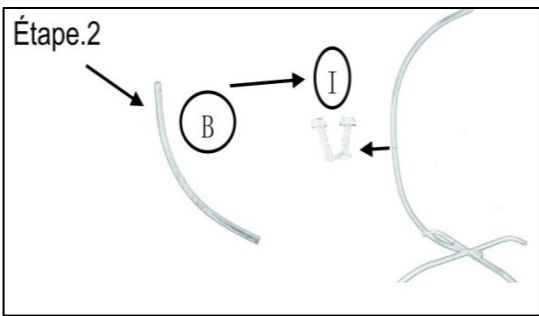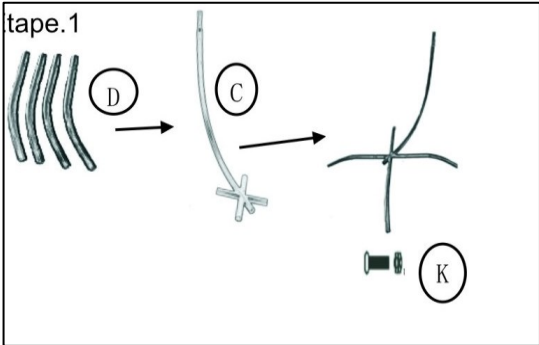

Sur une surface plane assemblez les pattes (pièces D 4 mcx) dans la structure pièce c'a l'aide de vis pièce K ne pas serrez complètement jusqu'à ce qu'il soit complètement assemblé

Ensuite glissez la structure B dans le haut de la structure C a l'aide de la vis pièce I

Dans la structure assemblée insérez la F dans l'œil vers le bas le trou du poteau. Serrez fermement la vis et le boulon. Accrochez le ressort E a la pièce F

Accrochez le clip mousqueton sur la structure de la chaise ensuite suspendre la chaise au ressort.

Fixez le poteau et la chaise a l'aide de la pièce J

Information & avertissements

Poids maximal recommandé est 225 lbs

Ce produit est uniquement conçu pour accueillir 1 personne à la fois. Ne dépassez pas cela car cela pourrait endommager le produit et causer des blessures. Ne pas monter sur la structure













Vérifiez régulièrement toutes les vis ou boulons pour vous assurer qu'ils sont serrés.




Les précautions doivent être prises lors de l'assise des objets pointus peuvent provoquer des déchirures à la tissu ou endommager l'osier

Ce produit n'est pas un jouet et ne doit pas être utilisé comme balançoire en aucune circonstance car cela pourrait entraîner des blessures.

Conservez toutes les sources de flamme et de chaleur loin de ce produit en tout temps.

Lorsqu'il n'est pas utilisé rangez-le dans un endroit frais et sec loin de toute source de chaleur

A	B	C	D	E	F	G	H	I	J	K	L
											
1pc +cushion & pillow)	1PC	1PC	4pc	1pc	1pc	1pc	1pc	2pc	2pc	4PC	1PC

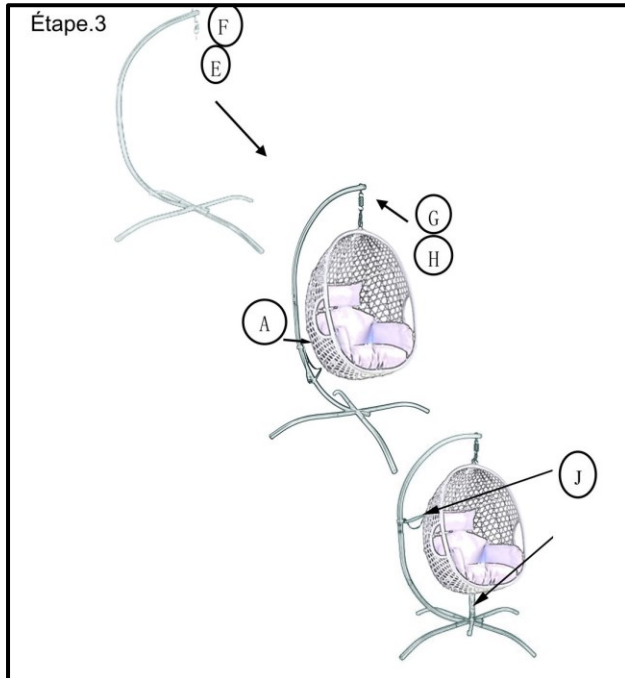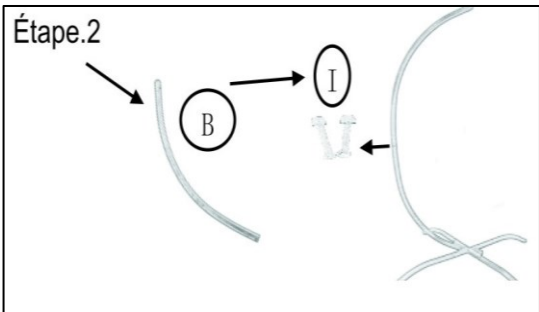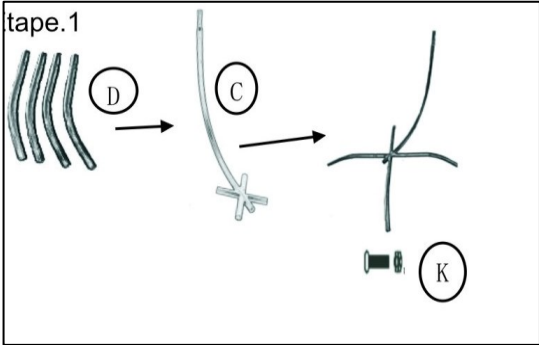

**On a level surface assembly legs part (D 4 pcs)
In to frame part C using screw part K Do not
completely lighten untill fully assembled.**

**Next slide frame part B into the top of the frame
part C using screws part I**

**On the assembled frame insert part F with the
eye below the frame pole.**

Tighten the nut and bolt securely

Hang spring part E onto part F

**Hang the caribeaner clip on the chair frame
Then hang chair on the spring**

Fixed pole and chair using part J

Information & warnings

Max recommended weight is 225 lbs

This product is only designed to seat 1 person at the time DO NOT exceed this as this could damage the product and cause injury.

This product should only be used on firm level ground.

Do not climb on the frame.

Check all screws or bolts on a regular basis to insure they are tight.

Care should be taken when sitting down sharp objects could cause tears to the fabric or damage the wicker swing.

This product is not a toy and should not be used as a swing under any circumstances as this could result in injury.

Keep all frame and heat sources well away from this product at all times.

When not in use please store away in a cool and dry place away from any heat source.

Manufacturer is not responsible for weather related damages due to high winds or extreme weather conditions.

Children must be supervised by adult when using the hanging chair

Never use this chair without the 2 security belt