






POWER DRILL REQUIRED DURING INSTALLATION / Perceuse électrique requise lors de l'installation


No	Image/Picture	Qté/Qty	No	Image/Picture	Qté/Qty
G		8pcs	G1	<p>Vis metal/Metal screws</p> 	8pcs
C3		1pc	CL1 CL2		1pc
C4		1pc			

1


Instructions d'assemblage/ Assembly instructions

34367 – PACIFICA PANNEAU D'INTIMITÉ 8.86' DE LARGE/PRIVACY END PANEL 8.86' WIDE

34368 – PACIFICA PANNEAU D'INTIMITÉ 5.58' DE LARGE/PRIVACY END PANEL 5.58' WIDE

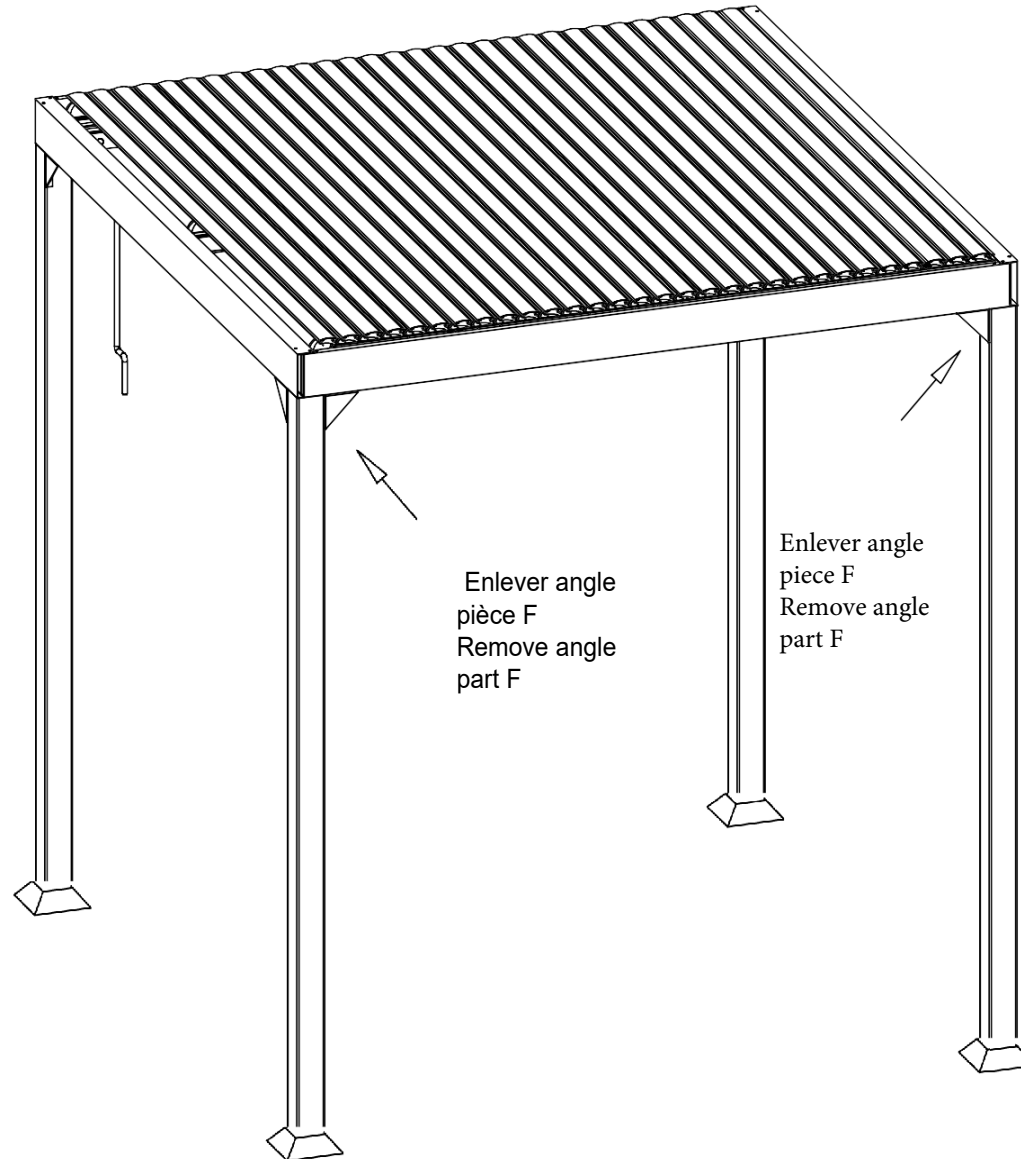


2

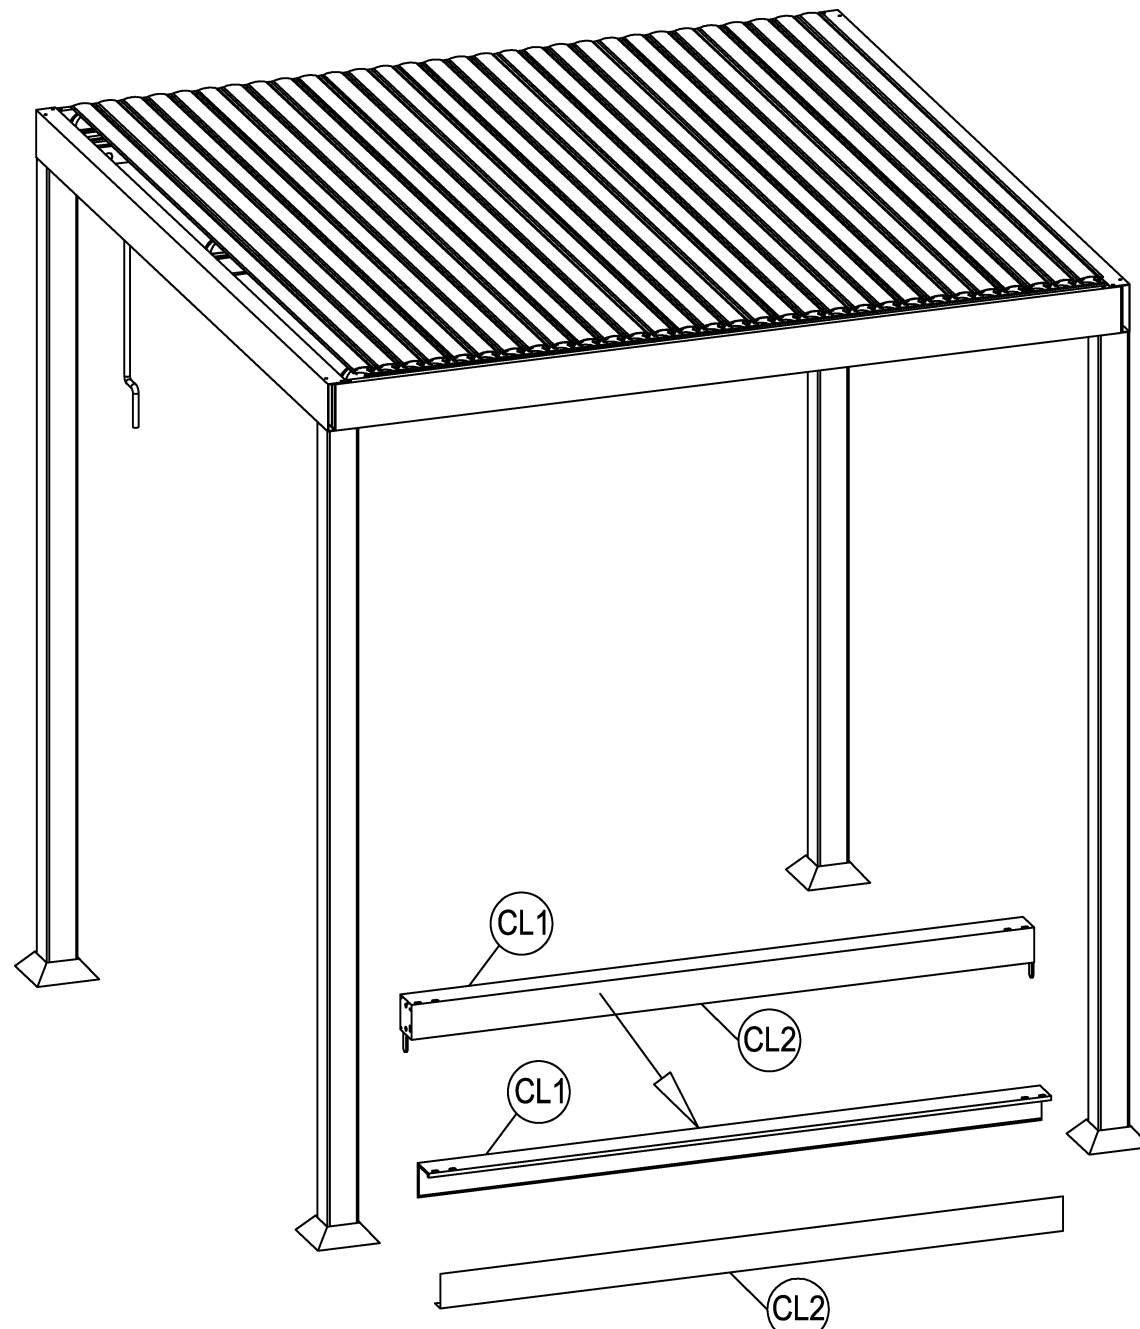


SEPARER CL1 DE CL2 - SEPARATE CL1 FROM CL2


3

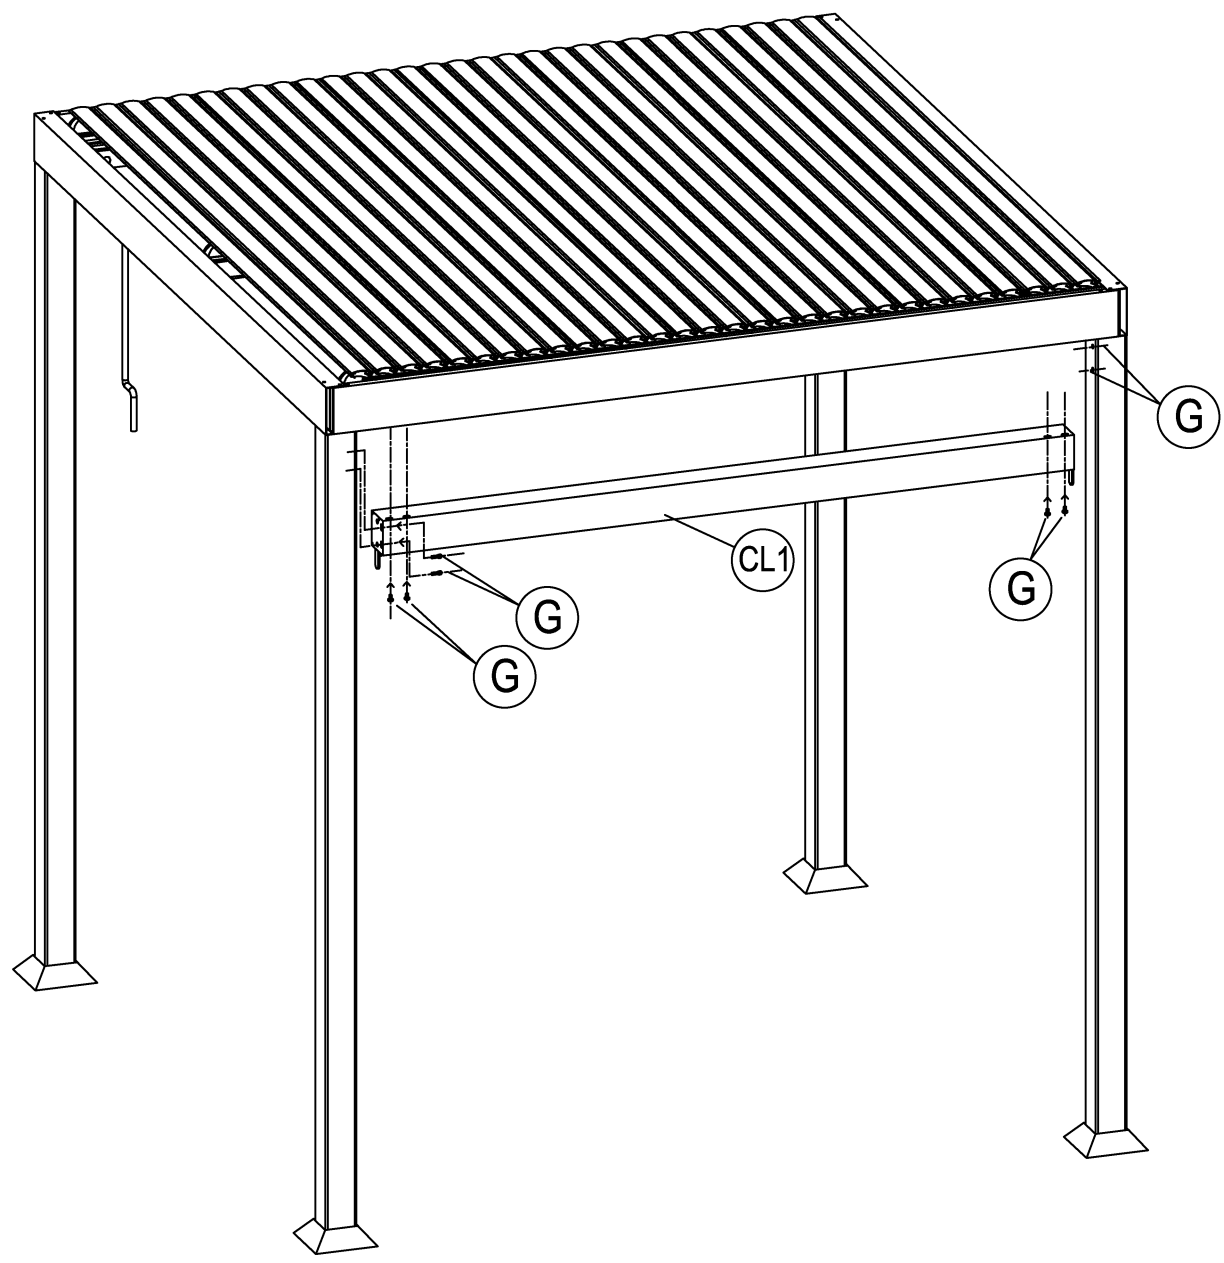

4

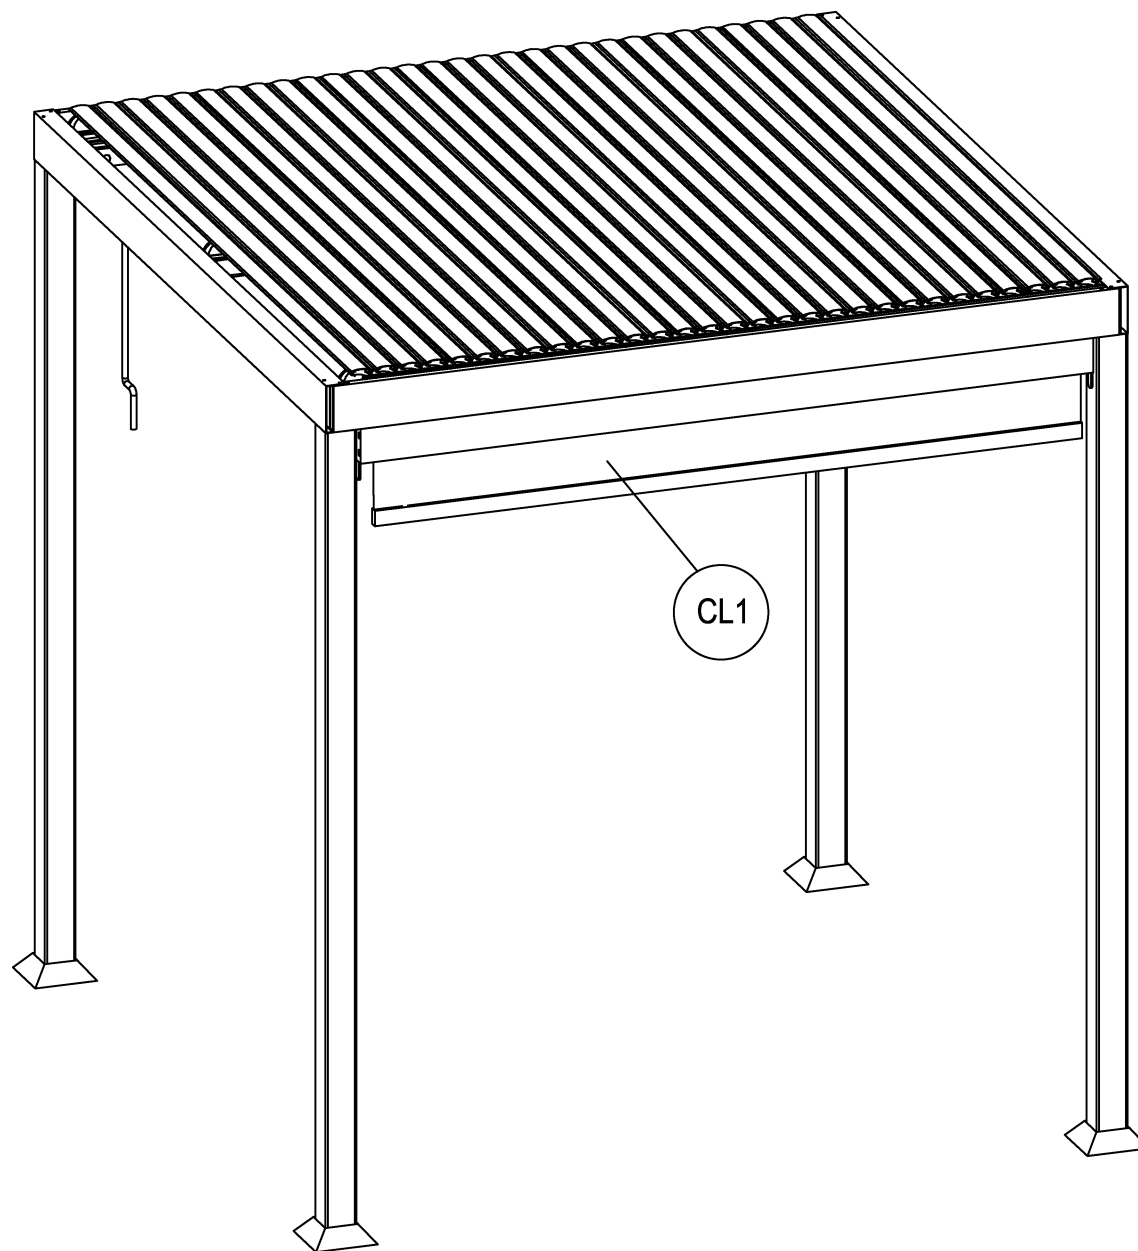

5

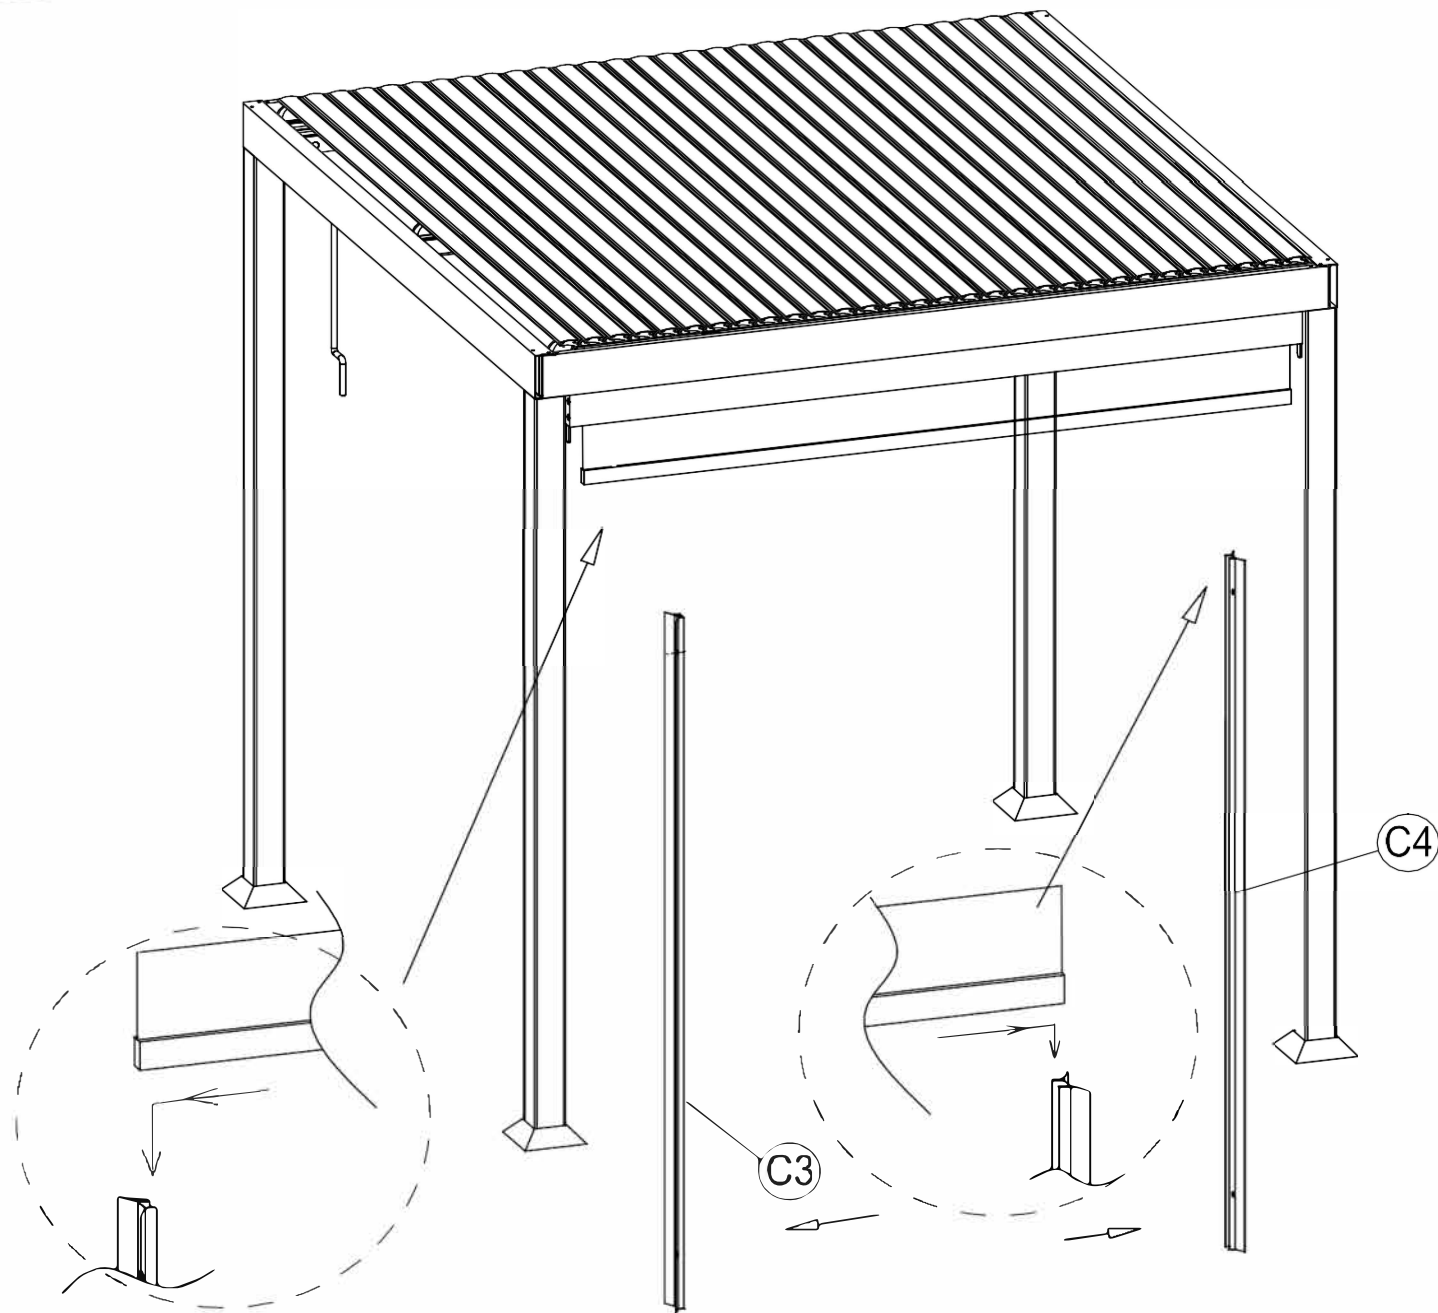

6

