



RIVERSIDE

Banc de parc / Park bench



22

11937












service@durahousewares.com

1-888-288-3872


INSTRUCTIONS D'ASSEMBLAGE – BANC DE PARC RIVERSIDE

ITEM #11937

LISTE DES PIÈCES

Pattes en fonte A	
Pattes en fonte B	
Dossier 1 pc Avec 4 lattes en bois fixés	
Lattes de siège 5 pcs	
Supports latéraux 2 pcs	
Barre du milieu 1 pc	
Boulon à tête croisée 16 pcs	
Rondelles 16 pcs	
Écrous 16 pcs	
Vis auto taraudeuse 7 pcs	
Capuchons plastiques 4 pcs	

- ① Assemblez le dossier aux pattes en fonte avec les boulons à tête croisée, rondelles et écrous. Ne pas serrer les boulons et écrous.

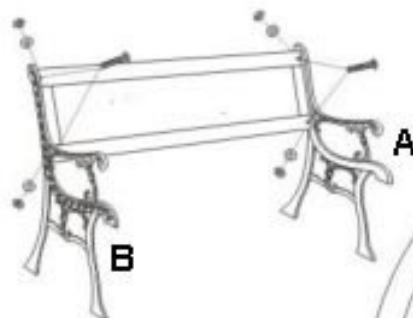


- ② Assemblez les lattes de siège aux pattes en fonte avec les boulons à tête croisée, rondelles et écrous. Assurez-vous que le banc se tient exactement droit (jusqu'à 90° du sol) puis serrez les boulons et écrous.



Tournez le banc de parc et maintenant il est prêt à l'emploi!

- ③ Tournez le banc à l'envers sur le sol. Fixez fermement la barre du milieu sur les 5 lattes de siège avec 5 vis auto taraudeuse. Puis fixez fermement chaque support latéral aux deux extrémités avec 2 boulons à tête croisée et 2 vis auto taraudeuse.

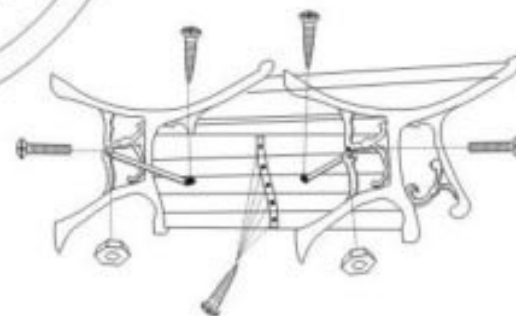












IMPORTANT : Assurez-vous de vérifier de temps en temps que les boulons et écrous sont bien visés.


ATTENTION : LORSQUE VOUS SOULEVEZ OU RETOURNEZ LE BANC, IL EST FORTEMENT RECOMMANDÉ QUE 2 PERSONNES EFFECTUENT L'OPÉRATION.

ASSEMBLY INSTRUCTIONS - PARK BENCH

PARTS LIST

A	
RIGHT CAST-IRON LEG	
B	
LEFT CAST-IRON LEG	
1	
1PC BACK (WITH 4PCS WOOD SLATS FIXED)	
5	
5PCS SEAT SLATS	
2	
2PCS SIDE BRACKET	
1	
1PC MIDDLE BAR	
16	
16PCS CROSS-HEAD BOLT	
16	
16PCS WASHER	
16	
16PCS NUT	
7	
7PCS SELF-TAPPING SCREW	
4	
4PCS PLASTIC CAP	

- ① ASSEMBLE BACK ONTO CAST-IRON LEGS WITH CROSS-HEAD BOLTS, WASHERS AND NUTS. DO NOT TIGHTEN THE BOLTS AND NUTS.

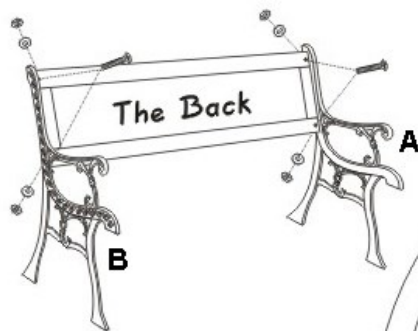


- ② ASSEMBLE SEAT SLATS ONTO CAST-IRON LEGS WITH CROSS-HEAD BOLTS AND NUTS. MAKE SURE PARK BENCH STANDS EXACTLY STRAIGHT UP (90° TO FLOOR) THEN TIGHTEN ALL THE BOLTS AND NUTS.



TURN OVER PARK BENCH AND NOW IT IS READY FOR USE!

③

TURN THE BENCH DOWNSIDE ON THE GROUND. FIX THE MIDDLE BAR ON THE 5 SEAT SLATS WITH 5 SELF-TAPPING SCREWS TIGHTLY. THEN FIX EACH SIDE BRACKET TO TWO ENDS WITH 2 CROSS-HEAD BOLT AND 2 SELF-TAPPING SCREWS TIGHTLY.

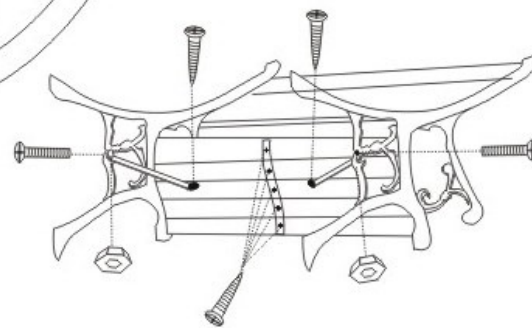

IMPORTANT: Ensure that you occasionally check bolts and nuts are tight.

CAUTION: WHEN LIFTING OR TURNING OVER IT IS STRONGLY RECOMMENDED THAT 2 PEOPLE CARRY OUT THE OPERATION.